


HANSER

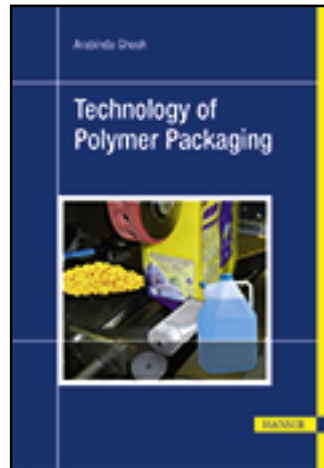

Sample Pages

Arabinda Ghosh

Technology of Polymer Packaging

Book ISBN: 978-1-56990-576-0

eBook ISBN: 978-1-56990-577-7

For further information and order see

www.hanserpublications.com (in the Americas)

www.hanser-fachbuch.de (outside the Americas)

Contents

Preface	VII
Acknowledgements	IX
Contents	XI
Abbreviations	XV
1 Basics of Polymer Packaging	1
1.1 Definition of Polymers	1
1.2 Manufacturing of Polymer Resins	1
1.3 Classification of Plastics: Molecular Structure	3
1.4 Plastics Additives	4
1.4.1 Usual Additives in the Packaging Sector	5
1.4.1.2 Light Stabilizer	5
1.4.1.3 PVC Stabilizer	5
1.4.1.4 Antiblock Agents	6
1.4.1.5 Antifog Agents	6
1.4.1.6 Nucleating Agents	6
1.4.1.7 Lubricants as Processing Aids	6
1.4.1.8 Slip Agents	6
1.4.1.9 Antistatic Agents	7
1.4.1.10 Colorants	7
1.4.1.11 Optical Brighteners	7
1.4.1.12 Chemical Blowing Agents	8
1.4.1.13 Antimicrobial Agents	8
1.5 Required Performance of Polymer Packaging	8
1.6 Different Types of Polymers Used for Packaging	9
1.6.1 Polyurethanes as Adhesives	11

1.7	Short Description of Some Polymers for Packaging Applications	12
1.8	Major Polymers Used in Packaging	16
1.8.1	Important Points for the Technologist	16
	References	17
2	Manufacturing of Polymer Packaging	19
2.1	Extrusion of Resins	19
2.1.1	Technology of Extrusion	20
2.1.2	Continuous Processes	26
2.1.2.1	Manufacturing of Blown Film	26
2.1.2.2	Manufacturing of Cast Film	30
2.1.2.3	Collapsible Tubes	34
2.1.2.4	Flexible Films for Packaging	39
2.1.3	Important Features for the Technologist	48
2.1.4	Discontinuous Processes	49
2.1.4.1	Injection Molding (IM)	49
2.1.4.2	Injection Blow Molding (IBM)	52
2.1.4.3	Extrusion Blow Molding (EBM)	54
2.1.4.4	Stretch Blow Molding (SBM)	56
2.1.4.5	Different Types of PET	60
2.1.4.6	Thermoforming	60
2.2	Sealing of Packages	71
2.2.2	Principles of Heat Generation for Sealing of Packaging Materials	73
2.2.3	Technology of Sealing	74
2.2.3.1	Direct Heating Systems	75
2.2.3.2	Indirect Heating Systems	77
	References	80
3	Converting of Polymer Packaging (Composite Packaging)	83
3.1	Technology of Converting	83
3.1.1	Modes of Converting Packaging Material	84
3.1.2	Technology of Coating	85
3.1.2.1	Extrusion and Coextrusion Coating	85
3.1.2.2	Coating with Lacquer	86
3.1.2.3	Coating with Polymer Dispersion	88
3.1.3	Technology of Lamination	89
3.1.3.1	Extrusion and Coextrusion Lamination	90
3.1.3.2	Dry Lamination, Solvent Based	91
3.1.3.3	Dry Lamination, Solvent-Free Adhesive	95

3.1.3.4	Glue or Water-Based Lamination	97
3.1.3.5	Wax or Hot-Melt Lamination	98
3.1.4	Important Features for the Technologist	99
3.2	Vacuum Deposition of Ultrathin Layers	100
3.2.1	Physical Vapor Deposition (PVD) Process	101
3.2.2	Chemical Vapor Deposition (CVD) Process	102
3.3	Radiation Upgrading of Packaging Material	104
3.3.1	Effect of Radiation on Plastics	104
3.4	Extended (Foamed) Packaging Materials	105
3.4.1	Physical Foaming with Gas	105
3.4.2	Chemical Nucleating Agents	106
3.4.3	Foam Extrusion	106
3.4.4	Foam Injection Molding	106
3.4.5	Foam Thermoforming	107
3.5	Special Topics	107
3.5.1	Sealing through Liquid and Dust	107
3.5.2	Transverse Sealing of Side-Folded Pouches	109
3.5.3	Weak Points of a Collapsible Polymer Tube	111
3.5.4	Pinholes in Packs	112
3.5.5	Complaint Management for New Technologists	113
	References	114
	Index	115

Preface


Since the first production of polyethylene on a large scale by ICI (Imperial Chemical Industries) in the 1930s, polymer materials, or as they are simply called, plastics, have been inevitable as successful packaging materials. Plastics protect all kinds of products like food, pharmaceuticals, cosmetics, medical products, and other nonfoods against deterioration. Although the amount of tissue material such as paper, paper board, and corrugated board used for packaging is a bit higher than polymers, polymers are inevitable for primary packaging. They fulfill all of the legislative regulations worldwide for direct contact with the product, particularly with food.

No other packaging material shows such a continuous and rapid development as does polymer packaging material. Scientists, experts, and technologists of the packaging sector are responsible for the development and application of tailor-made solutions. This book will contribute to the practical knowledge of specialists.

Besides basic and applied knowledge on technology, a number of valuable suggestions on critical cases are given in this book.

Finally, I hope this book will be a valuable help for the reader to solve technical problems and be a contribution to successful packaging development.

Global Packaging Materials – a Breakdown

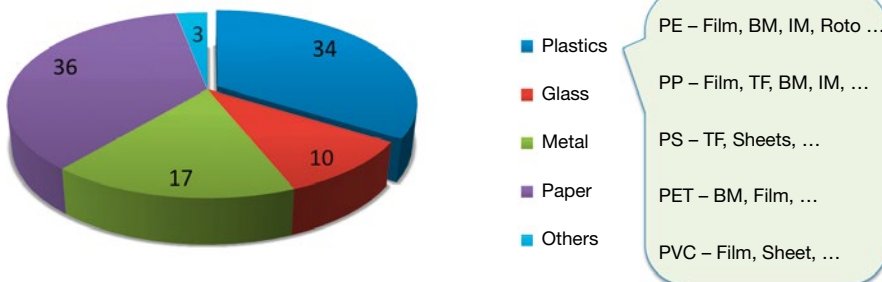

Plastics Have the Highest Growth Rate among All Materials in the Packaging Sector

2

Manufacturing of Polymer Packaging

■ 2.1 Extrusion of Resins

The first step in making polymer packaging is to melt the thermoplastic resins and then form them into films or sheets or into an end product like a cap, bottle, or cup. The machines with which this is done are called extruders. An extruder has two main components, a barrel and a screw. Both are made of alloy steel and are very robustly constructed because a pressure of several hundred bars arises during melting. The resins are furnished sometimes with additives that are abrasive; the extruder must be able to work such a product without getting damaged. Besides hard alloy steel, the inside of a barrel and the screw are treated through a series of physical processes like heating and quenching in water to produce high hardness. Whereas the barrel is a plain pipe, the screw is constructed in a very complicated manner. Around a shaft, helical threads are cut with different channel depths. The barrel has a number of heaters and the same number of fans on the outside. The heaters heat the barrel from the outside, and the fans cool it when necessary. Generally, the extruders for melting resins have one screw, a so-called single screw extruder (SSE). If a resin mixture is to be melted where mixing is very tough, then a twin screw extruder is used. The additive manufacturers have such twin screw extruders. The manufacturers of general packaging materials like film, sheet, and tube use single screw extruders. An extruder has three functions: convey the resin, melt it completely, and homogenize the melt, which is then processed into the target material.

An extruder is described according to “Euromap” with three numbers, for example, 1-25-30. The first number stands for the number of screws, the second one the length of the extruder in terms of its cylinder diameter (D), and the third figure is the diameter in millimeters. It is usual to describe the different lengths of different parts of an extruder in terms of its diameter. So the length of the conveying zone in a 25 D may be 10 D , the compression zone 7 D , and the homogenizing zone 8 D . Generally, the extruders have a length of 20 to 30 D , depending upon what parts are integrated into the screw. For thermally stable polymers like PE or PP, a longer

extruder can be used because the resin can be kept hot longer without any material damage. For PVC or PVdC, which are very unstable under heat, the length of an extruder is less.

2.1.1 Technology of Extrusion

As already mentioned, the functions of an extruder are to convey, melt, and homogenize a resin before purging.

The screw has a solid shaft of constant or increasing diameter toward its end. Helical flights divide the screw in pitches. The screw has generally three zones (Fig. 2.1). In the first zone, the channel volume in the pitches is constant, and hence the resin is simply conveyed in this zone. In the second zone, the channel volume is reduced by reducing the channel depth, so the resin is compressed here. At the same time, the barrel is heated from the outside, and the resin melts completely. In the third zone, the metering zone, the channel volume is again constant so the melt can be mixed and homogenized properly to keep a constant temperature and viscosity. High-quality packaging materials can only be manufactured if the melt is free from specks (unmolten resin) or dirt particles and is homogeneous. At the end of most extruders, an adapter is placed to create a certain back pressure, so the melt stays a bit longer in the extruder to get better homogenized in the metering zone. The applied back pressure depends upon the resin type and is generally 50 to 100 bar. A film from an inhomogeneous melt shows streaks, which arise through inhomogeneous refraction of light through the film.

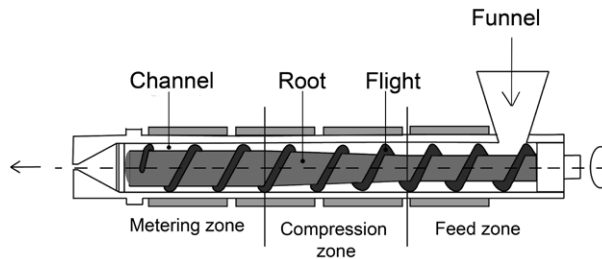


Figure 2.1 Standard three-zone extruder

Standard Three-Zone Extruder

Although only one end of the heavy screw is mounted with the gear system or directly with the motor and the other end is free, it does not rub the barrel during rotating. The melt inside the extruder stabilizes the screw position. Once mounted, the extruder is fed with a resin, and it is always kept full with melt, even if it is

turned off. During restarting the barrel is heated until all of the resin melts, and it can then turn. To accelerate the process, the extruder is always fed with a so-called cleaning resin, which is a low-melting resin type, before stopping production. When restarting an extruder, a lot of melt is always lost, until all of the parameters are optimum for the next production. To avoid the loss of material and time, extruders generally run around the clock.

Important facts in producing an ideal melt for a packaging application are an extruder with the proper screw, the choice of the proper resin, the proper additive packet, and finally the proper working parameters. In particular, it is very important to not overheat the extruder. If the extruder is overheated, then resin may burn and produce brown to black particles. Some of them stick to the barrel inner wall. Even if later, good melt quality is produced, the burned particles leave the barrel wall from time to time, which leads to a dirty melt. Spots or even holes in the films or pipes are produced. It may take a whole day to clean the extruder.

The extruder is mounted on a robust base. The screw is turned by a powerful electromotor via a suitable gear system to achieve different RPMs for the screw. The resin is poured into the extruder through a funnel at the beginning of the extruder. To avoid premature melting of the resin, the barrel is cooled at this position. Premature melting of the resin may jam the extruder and then no resin can be fed.

The nozzle of the extruder is connected with subsequent tools to produce the desired material, for example, an annular ring for blown film, a coat hanger die for chill roll films, or injection-molding tools.

Types and Technology of Different Screw Types

A typical screw is shown in Fig. 2.2. The drive shank is mounted on the gear or directly on the motor. It has helical flights and three sections, the feed, compression, and metering sections. The channel depth in the feed section is high and reduces gradually at the compression section as simultaneously the root diameter increases. The resin melts through heat from friction and from external heat supplied outside the barrel. Lastly, the melt is homogenized in the metering section before it is purged out. The pitch is constant throughout the screw. Compression is also possible by reducing the pitch rather than reducing the channel depth. The leading edge of the flight pushes the resin and melt forward. Both pressure and friction are high in this section. The trailing edge has, in contrast, no pressure function. The screw tip can have different forms, depending on use. The screw is the main part of an extruder because through proper construction it is possible to process a particular resin in a particular way. First it must fulfill the proper compression that is necessary to melt the resin. The screw may have a constant shaft diameter and reducing pitch length at the compression zone, or the shaft could have an increasing gradient with the pitch length constant.

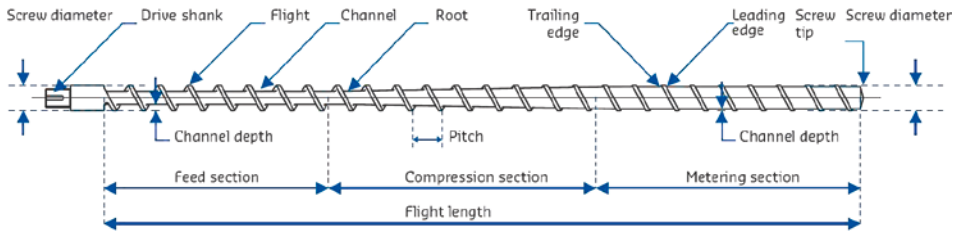


Figure 2.2 Standard three-zone extruder screw, courtesy of William Reay, Kuraray, EVAL Division

It may have two zones, in which compression takes place in the first zone and homogenizing in the second zone. Most often there are three zones: transport, compression, and homogenizing zones. The pitch is constant throughout, but the shaft diameter is low in the first zone and increases gradually to a highest value in the second zone. In the third zone it is once more constant. The compression zone may be short with high gradient, which is suitable for thermally robust resins like PE or PP, or it may be a bit long for thermally sensitive resins. Screws may have a decompression zone with a higher channel depth just after the compression zone. This enables the gas bubbles, which arise particularly when working with recycled resins, to move up and leave the extruder through a valve. In some high-quality screws there is a shearing part, for example, a Maddock element. The diameter of the screw shaft is highest in this part so that the melt has the narrowest possible route through the extruder. This causes the specks to press against the barrel inner wall and ultimately melt.

Finally, there may two different types of barrier screws. The barrier screws have a transition flight after the compression and shearing parts. The objective of the transition flight is to separate the specks from the melt, press them into this part, and ultimately melt them completely. There are two types of barrier screws. One is named after Maillefer, this one having a variable pitch for the transition flight but constant shaft diameter, and the other after Barr, this one with variable channel depth but constant pitch for the transition flight.

Types of Barrels

There are two types of barrels: a barrel with a constant inner diameter and a barrel that has a number of slant grooves in the feed zone. The grooves are placed symmetrically along the perimeter of the barrel with the highest depth at the beginning, which reduces gradually and vanishes after some 3 to 4 D with the inner diameter of the barrel. Through the first type of barrel, a constant amount of resin can always be processed. In a three-zone extruder with such a barrel, the highest melt pressure, around 200 bar, is always at the end of the compression zone.

In a grooved barrel, in contrast, more resin can be transported at the beginning through the grooves than in a normal barrel, and the highest pressure of the melt is just after the position where the grooves end. The highest melt pressure in a grooved barrel is around 1000 bar and is much higher than in a nongrooved one. It is therefore easier to furnish a screw with different parts like shearing or barrier parts, which need more power to drive. Not all types of resin are suitable to be extruded in a grooved cylinder. Resin suppliers advise the manufacturers whether it is suitable for a grooved feed zone or not.

Universal Extruder

A universal extruder is a machine where different resins may be processed. It has no barrier part and only sometimes a shearing part. It is suitable to produce an acceptable quality of melt with different resins. The extruder is optimized for a broad spectrum of applications, such as LDPE, HDPE, LLDPE, EVA, and ionomers with different additives.

High-Performance Extruder

A high-performance extruder is one that has to produce a very high quality melt out of resins to produce a high-quality product. The extruder screw is specially constructed to match a particular polymer like nylon (PA), PET, or PS. Other types of polymers or even resins with some additives cannot be worked with these extruders at sufficiently high quality. The objective of a high-performance extruder is to produce very high quality product, mostly films for a particular application. High-performance extruders always have a shear part, if not barrier parts.

Coextrusion

Packaging performance can, in most cases, not be fulfilled by a single layer of material. Properties of different resins or other packaging materials like paper or aluminum are combined into a multilayer packaging material called a composite. These are the ideal packaging material to fulfill different requirements.

Different layers of composites are written in a line with a slash between the layers, like PET/Al/PE 12/8/60, or the layers can be written one on top of another, like below.

PET	12
Al	8
PE	60

The first version takes less space and is easier to write. The layer thicknesses are written next to the composite in micrometers (μm). In this book the first version will be used. The left side represents the outer layer and the right side the inner

layer. The inner layer has most of the sealing function: it is in direct contact with the product, for example, food. This layer must fulfill all of the legislative requirements. For a pure polymer composite, all of the resins of the different layers are melted in different extruders, and the melts are combined in a suitable series to make the final packaging material (Fig. 2.3).

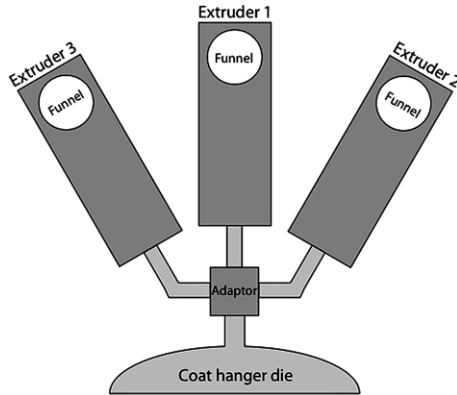


Figure 2.3 Coextrusion line with three extruders

Because the bonding forces between the layers of most resins are not high enough, special bonding resins are necessary, which are called tie resins. For each type of resin, main layer, or tie layer, one extruder is necessary. The suitable layer structure is built in a feed block, where the different melt streams from the extruders are fed. The feed block is the heart of a coextrusion line (Fig. 2.4).

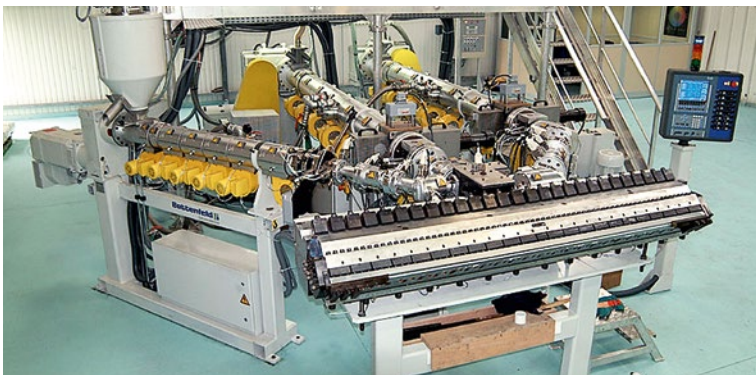


Figure 2.4 Coextrusion with three extruders, feed block, and coat hanger die, courtesy of Battenfeld

Index

A

acetaldehyde 14
acrylic 97
additives 5
adhesive 89, 92
air knife 32
Al₂O₃ 100
Al barrier laminate 37
AlOx 100
aluminum 36
amine light stabilizer XVI
amorphous XVII, 3
antiblock 6
antifog agents 6
antimicrobial 8
antioxidants 5
antistatic 7
aromatic 5
aseptic 69
atactic 13
auger dosing 109

B

bags 12
barrel 19
barrier 22, 25
biaxial-oriented XV
blends 5
blocking 30
blowing agents 8
blown film 27
blow-up ratio 28

BOPA / BONY) XV
bottles 12, 14
boxes 77
branching 3
brittle 4
bubble 26

C

calendering 33
caps 49
cast films 46
cast sheets 33
catalysts 5
cavity 49
ceramic barrier laminate 37
channels 44
chemical resistance (ESCR) 8
chemical vapor deposition 102
chill roll 31
clarity 16
closure 39
coat hanger die 21
coating 84
coefficient of friction 6
coextrusion 84
COF XV
cohesion 85
coinjection 51

collapsible tube 112
colorants 7
composite cans 98
composites 79
compounding 4
compression 19
condensation 102
conduction 63, 73
converting 83
copolymers 90
core 28
corona treatment 30, 85
cosmetics VII, 107
covalent bonds 29
CPP 88
craters 112
cross-linking 93
crystalline 3
crystallites 3
Curing 85
curtain 102

D

deformation 4
degradation 5
density 9
deposition 14
die 24
die-cut lid 70
dielectric 77
diffusion 29

dimensional stability 46
 dispersion 84, 85
 double-bubble 42
 drape forming 70
 dry lamination 84
 duroplastics 4

E

EAA 11
 elastic 46
 elasticity 61
 elastomer 104
 electron beam gun 101
 electrostatic 39
 elongation 60
 environmental stress
 crack resistance (ESCR)
 83, 111
 epoxy phenol 36
 EPS XVI
 erucamide 7
 ESCR 83, 111
 ethylene–acrylic acid co-
 polymer 11
 ethylene–butyl acrylate
 copolymer 11
 ethylene–methacrylic acid
 XVI
 ethylene–vinyl acetate 11
 EVOH 14, 15
 extruder 17
 extrusion 19
 extrusion blow molding
 54

F

fatty acid 5
 feed block 24
 female (cavity) 65
 fillers 65
 film 89
 filter 88

flexible 90, 100
 – packaging 13
 flow 26
 fluoroelastomers 48
 fluoropolymers 48
 foam extrusion 106
 foaming 84
 foam injection molding
 106
 foam thermoforming 107
 fog 6
 foil 11, 37
 food packaging 42, 44
 friction 73
 frost line 27
 functional layers 55
 funnel 21

G

gamma radiation 104
 gas flame 29
 gelation 88
 glass transition tempera-
 ture 61
 glue 97
 glycol XVII
 green tack 85
 grooves 22

H

HALS XVI
 HCl XVI
 HDPE XVI
 HDT XVI
 head 4
 heat seal lacquer 87
 HFFS 109
 HIPS XVI
 hot air 42
 hot fillable 16
 hot knife 54
 hot melt 85
 hot tack 10, 13

hydrogen bonding 2

I

impact 110
 induction sealing 74
 infrared XVI, 88
 injection blow molding
 53
 injection molding 50
 in-line thermoforming 68
 in-mold labeling (IML) 55
 inner sealing layer 30
 ionomer 40, 73
 isotactic 13
 isotropic 46

K

kaolin 67

L

label 15
 lacquers 29
 lamination 37, 84
 lap seal 37
 latex 88
 LDPE XVI
 leakage 37, 70
 lips 31
 LLDPE XVI
 longitudinal sealing 35
 lubricants 6

M

machine 6
 macromolecules 1, 12
 magnetic 79
 male (positive mold) 65
 mandrel 38
 MAP 40
 masterbatch 5
 MDPE 9

medical 14
 melt flow 6, 51
 melting point 61
 melt temperature 51, 61
 metallocene XVI
 metering zone 20
 migration 25
 mixing 34
 mLLDPE XVI
 modulus 61
 moisture 83
 molding 54
 molecular weight 61
 monomers 93
 MXD6 XVI

N

NaOH 13
 neck-in 31
 needle closures 51
 negative forming 65
 nip rolls 27, 86
 nonpolar 77
 nucleating agents 106

O

oleamide 7
 opaque 7
 OPLA XVI
 OPS XVI
 orientation 3, 42
 oxidation 102
 ozone 29

P

PA XVI
 PAN XVI
 paneling 81
 parison 55
 peel sealing 72
 permeation 113
 PET XVII

PET-A XVII
 PET-C XVII
 PET-G XVII
 pharmaceutical blisters
 15
 phenols 5
 phosphites 5
 phthalates 15
 pigments 55
 pinhole 100
 plasma 101
 plasticized polyvinyl
 chloride XVII
 plasticizers 11
 plastomers 80
 plug assistance 61
 polarized 80
 polyaddition 1
 polyamide / nylon XVI
 polycondensation 1, 60
 polyester 10
 polyethylene VII
 polyethylene naphthalate
 XVII
 polyethylene terephthalate
 XVII
 polylactic acid XVII
 polymer barrier laminate
 37
 polymerization 1
 polyolefin XVII
 polystyrene XVII
 polytetrafluoroethylene
 XVII
 polytetramethylene
 terephthalate XVII
 polyurethane 2
 polyvinylchloride 3
 positive forming 65
 pot life 85
 preforms 14
 prepolymers 85
 pressure 86
 primer 86
 processing aids 6

propagation 94
 properties 48
 PVC-P 105
 PVD XVII
 PVdC XVII
 PVOH XVII

Q

quartz 64

R

radiation 64
 radiation upgrading 104
 radicals 104
 reactive 103
 recycling 28
 regulations 41
 relaxation 44
 responsibility of a
 producer 9
 retention force 111
 retorting 46
 roll stocks 41
 RPM 21
 rubber 75

S

sachets 109
 sacks 12
 scrap 25
 screw 22, 25
 sealing 24, 26
 – integrity 72
 – jaw 72
 – layer 72
 – pressure 72
 – strength 72
 – through dust 80
 – through liquid 80
 – time 72
 semicrystalline 3
 shearing 22

sheet 25
 shelf life 40
 shrink films 41
 shrinking 42
 side-folded pouches 109
 silicon dioxide XVII
 silicon monoxide XVII
 single screw extruder 5
 SiO_x XVII
 skin packaging 70
 sleeves 45
 slip agent 5
 solid content 94
 solvent based 87
 solvent-free 87, 93
 specific heat 102
 spectrum 5
 spherulites 3
 SPPF (solid phase pres-
 sure forming) 61
 squeezing 35
 stabilizer 5
 stiffness 5
 strain 74
 strength 74
 stress crack 111
 stretch 14
 stretch blow molding 56
 surface tension 29
 swelling 106
 syndiotactic 13

T

tandem 105
 tearing 40
 tensile 40
 tentering 47
 thermoform-fill-seal (TFFS)
 65, 68
 thermoforming 48
 thermoforming window 61
 thermoset plastics 4
 tie layer 13, 24
 tightness 37

TiO₂ 62
 tools 21
 toughness 16
 transparency 28
 transverse direction 42
 transverse sealing 72
 triple-bubble 44
 tubes 49
 twin screw extruder 4

U

ultra low density PE 11
 unplasticized polyvinyl
 chloride XVII
 unsaturated 1
 UV 39, 41

V

vacuum deposition 83
 vacuum-shrink pouches
 41
 van der Waals forces 2
 very low density PE 11
 VFFS (vertical-form-fill-
 seal) 72, 109
 vinylacetate 9
 viscosity 20
 volumetric dosing 109

W

waste 49
 water bath 42
 water bath sheets 33
 wavelength 64
 wet lamination 84
 winding 94
 wrapping 97

Y

yield 73